

Node Statistics

From "AllStarLink Wiki"

Publishing Node Statistics

Allstar Link nodes can optionally publish some of their statistical information on stats.allstarlink.org. By default, status reporting is not enabled. To enable status reporting, the config file /etc/asterisk/rpt.conf needs to be modified.

Making the changes in DEBIAN

Using a text editor such as vi or nano, edit the file /etc/asterisk/rpt.conf. Uncomment or Insert the following two lines in the node stanza for a node you wish to publish the statistics for:

```
[1999]
....
....
statpost_program=/usr/bin/wget,-q,--output-document=/dev/null
statpost_url=http://stats.allstarlink.org/uhandler.php ; Status updates
```

Making the changes in ACID

Using a text editor such as vi or nano, edit the file /etc/asterisk/rpt.conf. Insert the following two lines in the node stanza for a node you wish to publish the statistics for:

```
[1999]
....
....
statpost_program=/usr/bin/wget,-q,--output-document=/dev/null
statpost_url=http://stats.allstarlink.org/uhandler.php ; Status updates
```

Making the changes in Limey Linux

Using the vi or emacs text editor, edit the file /etc/asterisk/rpt.conf. Insert the following two lines in the node stanza for a node you wish to publish the statistics for:

```
[1999]
....
....
statpost_program=/bin/wget,-q,--output-document=/dev/null
statpost_url=http://stats.allstarlink.org/uhandler.php ; Status updates
```

Retrieved from "http://wiki.allstarlink.org/w/index.php?title=Node_Statistics&oldid=1266"

Category: How to

- This page was last modified on 28 January 2019, at 01:38.