

# Standard Node vs Remote Base

From "AllStarLink Wiki"

## Specifying a Standard Node and a Remote Base Node in rpt.conf

In the **nodes stanza**, a remote base node is denoted when it is suffixed with a y option:

```
[nodes]
1234 = radio@127.0.0.1/1234,NONE,y ; Remote base node
5678 = radio@127.0.0.1/5678,NONE ; Standard node
```

In the above example node 1234 is a remote base node, and node 5678 is a standard node.

Retrieved from "[http://wiki.allstarlink.org/w/index.php?title=Standard\\_Node\\_vs\\_Remote\\_Base&oldid=1326](http://wiki.allstarlink.org/w/index.php?title=Standard_Node_vs_Remote_Base&oldid=1326)"

Category: How to

- 
- This page was last modified on 28 January 2019, at 14:30.